

SanoCalce Plaster

RÖFIX®



Breathable Lime Plastering Solutions

Econova Malta



+356 9942 1158



#econovamalta
info@econovamalta.com.mt


Phase 1 - Prepping the Walls



Thorough preparation is key to a long-lasting finish.

1. Brush Walls: After removing old plaster, brush the walls thoroughly with a medium-hard bristled broom to remove loose debris.
2. Wash Walls: Wash the walls thoroughly with distilled water (AC or dehumidifier drain water also works great to avoid introducing new salts). Use a manual spray pump at 2-3 bar to remove fine powder and surface salts.

- Dry & Re-brush: Let walls dry for 24 hours. If salts reappear, brush again.
- Apply Anti-Salt Treatment: Using a thick painter's brush or spray pump, apply anti-salt treatment "wet on wet" until the wall surface is saturated and showing less absorption of product.
- If areas show quicker absorption, re-apply immediately. (no need to wait for the product to dry in order to re-apply - hence why wet on wet.)

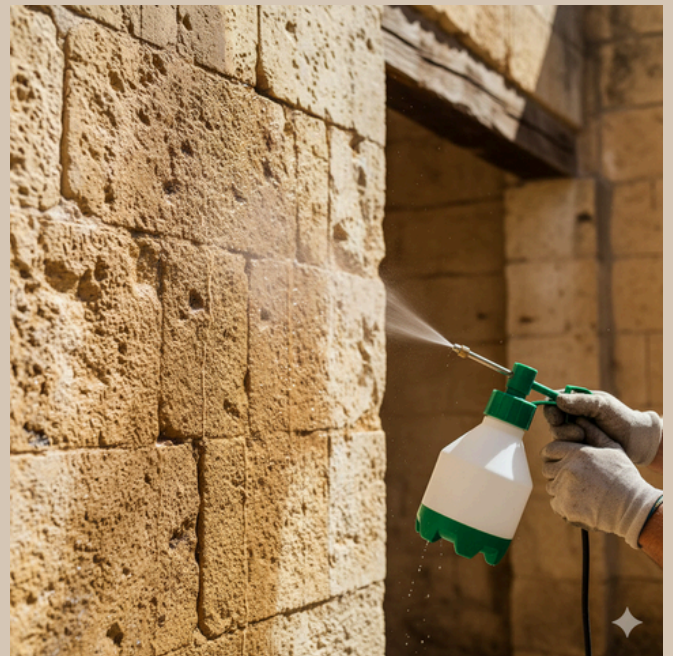

Phase 1 - Prepping the Walls



Phase 2 - Applying The Base Coat: SanoCalce Fondo



RÖFIX SANOCALCE FONDO
Rinzafo antisale a base di NHL5

- Elevata capacità di accumulo salino
- Elevata permeabilità al vapore
- Buona lavorazione a macchina

RÖFIX[®]

Before applying the base coat, make sure the wall is wet thoroughly. Surface must be clean and free of fine dust or powder. Once the wall is washed properly, apply 8mm to 1cm of SanoCalce Fondo. Leave a week to dry. Do not apply plaster in direct sun (unless properly covered with a hessian or netting). During hotter days, make sure to lightly mist the plaster right after application to avoid fast drying. Do not use heating or dehumidifiers during drying.

Phase 3 - Applying The Main Coat: Rofix Intonatura



This layer builds the final thickness and can be finished for texture.

1. **Spray Base Coat:** Lightly spray the dried base coat before applying the main coat to prevent it from absorbing moisture too quickly.
2. **Apply Main Coat & Mesh:** Apply the main coat at a thickness of no less than 1cm. Embed a polypropylene or fiberglass mesh into the plaster, ensuring it's closer to the top surface, then add another 4-5mm of plaster to cover the mesh. Leave to dry for 8-10 days.
3. **Optional Smoother Finish:** For a smoother finish, apply two thin layers over the main coat: Rofix Sanocalce Finitura and Calceclima Classic Finish, each at 2-3mm.
4. **Drying:** Allow a week for drying before painting. This waiting time is crucial for proper lime carbonation. Ensure natural ventilation by keeping windows and doors open. Do not use heating or air conditioners.

Contact us for any questions or queries you may have. We're happy to help.

email: info@econovamalta.com.mt

Phone/WhatsApp: +356 9942 1158

Facebook: [#econovamalta](https://www.facebook.com/econovamalta)



RÖFIX
Sistemi per costruire



RÖFIX SANOCALCE
Sistema di risanamento a base NHL5